



Installation instructions

Fit the sunshade from inside the car, following the steps below.

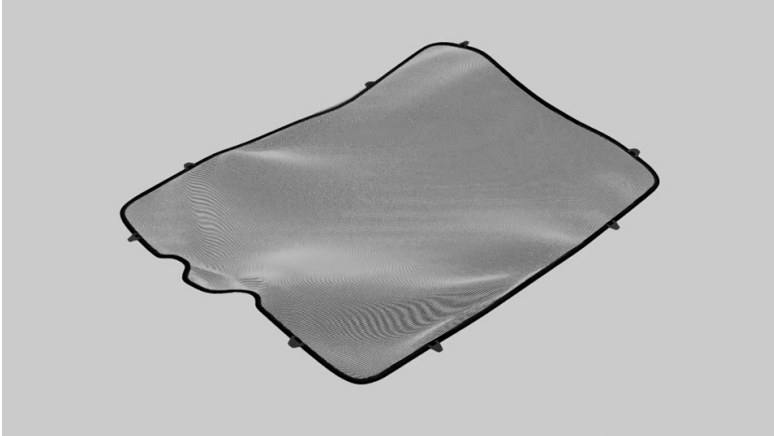


1 Unfold the sunshade

Take the sunshade out of the bag. Hold onto the frame and gently unfold it until it opens fully.

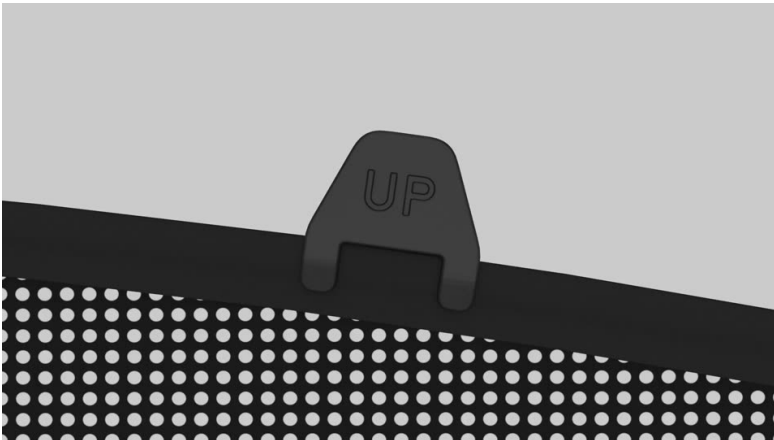

2 Find the top side

Look for **UP** on the clips around the edge. This side should face the roof glass.

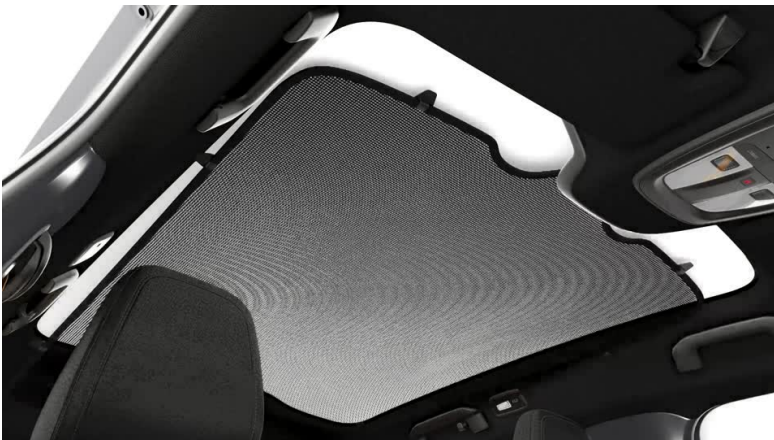

3 Line it up with the roof

Lift the sunshade up to the roof. Line up the cutout with the overhead console at the front, then center the shade under the glass.

Secure the sunshade

4 Slide the clips into place

Hold the sunshade in place and slide the clips into the gap between the glass and the headliner. Work your way around the edge, fitting each clip as you go. If a clip resists, check its position rather than forcing it.



Slide the clip into the gap



Clip in place

5 Check that it stays in place

Make sure the shade sits evenly under the glass and fits around the overhead console. Check each clip, then give the frame a gentle nudge to make sure it stays in place.

